

LEVER-NUT J-BOX INSTALLATION For P/N 406270 CELL-SB10KLBS-21'

Install J-Box

Install J-Box on flat surface and if possible with cables hanging downward using 4 screws (not provided) and washers (provided).


Caution: Use washers provided with mounting screws to prevent damage to housing. Do

not over-tighten screws.

Connect Load Cell and J-box Cable

- Insert load cell and J-box cables through each of the water-tight strain-reliefs. Do not tighten strain relief nuts.
- Connect load cell wires of the same color to the same terminal block as shown above. See instructions below.
- 3. Connect the **J-box cable wires** according to the table below. (Note: Ignore wiring diagram 404928 Inside cover)

| J-box Cable Wire Color | Connect To: | Load Cell Lever-nut Terminal block |
|----------------------------------|---------------|---------------------------------------|
| WHITE | | GREEN |
| GREEN | | WHITE |
| RED | | RED |
| BLACK | \rightarrow | BLACK |
| BARE | \rightarrow | BARE |

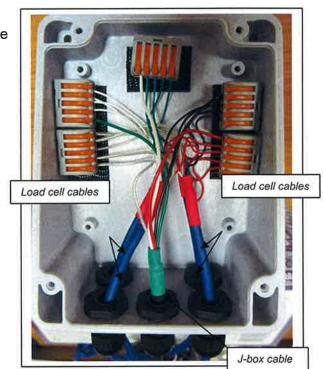

- 4. Tighten nuts on the water-tight strain reliefs. Make sure nuts are clamping down on cable and not the heat shrink tubing.
- 5. Assure that the cover gasket is properly installed.
- 6. Attach cover using 4 screws (provided).

Installing wires into Terminal Block

- 1. Open levers 90° to locked position.
- Insert individual wires into terminal.
 (note: Wire strip length is 7/16" (11mm))
- 3. Close lever.
- **4.** Tug wires to assure solid connection.

