

Montag Gen II Mini

Row Configuration

8 ROW MINI UNIT

8 Row 1 Section

A	B	C	D	E	F	G	H
8	1	7	2	6	3	5	4

Fan end	8 row 1 section Shaft configuration	
A&E	Section W (Full Shaft) Top	N/A

8 Row 2 Section

A	B	C	D	E	F	G	H
8		7		6		5	
	1		2		3		4

Fan end	8 row 2 section Shaft configuration	
A&E	Section W (Full Shaft) Top	N/A
B&F	Section X (Full Shaft) Bottom	N/A

8 Row 3 Section

A	B	C	D	E	F	G	H
8				7		6	
	1	2	3		4		5

Fan end	8 row 3 section Shaft configuration	
A&E	Section W (Full Shaft) Top	N/A
B&F	Sect X (Half) Bottom	Sect Y (Half) Bottom

8 Row 4 Section

A	B	C	D	E	F	G	H
8		7		6		5	
	1		2		3		4

Fan end	8 row 4 section Shaft configuration	
A&E	Sect W (Half) Top	Sect Z (Half) Top
B&F	Sect X (Half) Bottom	Sect Y (Half) Bottom

blank Section W Section X Section Y Section Z

View of tank from driver left side

 MOTORS CW (A,C,F,H), CCW (B,D,E,G)

REFER TO DIAGRAM FOR PLACEMENT

7 ROW MINI UNIT

7 Row 1 Section

A	B	C	D	E	F	G	H
	1	7	2	6	3	5	4

Fan end	7 row 1 section Shaft configuration	
A&E	Section W (Full Shaft) Top	N/A

7 Row 2 Section

A	B	C	D	E	F	G	H
		7		6		5	
	1		2		3		4

Fan end	7 row 2 section Shaft configuration	
A&E	Section W (Full Shaft) Top	N/A
B&F	Section X (Full Shaft) Bottom	N/A

7 Row 3 Section

A	B	C	D	E	F	G	H
		7				6	
	1		2	3	4		5

Fan end	7 row 3 section Shaft configuration	
A&E	Section W (Full Shaft) Top	N/A
B&F	Sect X (Half) Bottom	Sect Y (Half) Bottom

 
7 Row 4 Section

A	B	C	D	E	F	G	H
		7		6		5	
	1		2		3		4

Fan end	7 row 4 section Shaft configuration	
A&E	Sect W (Half) Top	Sect Z (Half) Top
B&F	Sect X (Half) Bottom	Sect Y (Half) Bottom

blank Section W Section X Section Y Section Z

View of tank from driver left side

 MOTORS CW (A,C,F,H), CCW (B,D,E,G)

REFER TO DIAGRAM FOR PLACEMENT

Number represents toolbar location (left to right when viewed from behind toolbar), letter represents hook-up locations on hose manifold.

Montag Gen II Mini

Row Configuration

6 ROW MINI UNIT										
6 Row 1 Section										
A	B	C	D	E	F	G	H			
1	6	2	5	3	4					
6 Row 2 Section										
A	B	C	D	E	F	G	H			
		6		5		4				
1		2		3						
6 Row 3 Section										
A	B	C	D	E	F	G	H			
		6				5				
1		2	3	4						
6 Row 4 Section										
A	B	C	D	E	F	G	H			
		6		5		4				
1					2		3			
blank	Section W	Section X	Section Y	Section Z	<i>View of tank from driver left side</i>					
				MOTORS CW (A,C,F,H), CCW (B,D,E,G)						
REFER TO DIAGRAM FOR PLACEMENT										

5 ROW MINI UNIT										
5 Row 1 Section										
A	B	C	D	E	F	G	H			
1	5	2		3	4					
5 Row 2 Section										
A	B	C	D	E	F	G	H			
		5				4				
1		2		3						
5 Row 3 Section										
A	B	C	D	E	F	G	H			
		5				4				
1		2		3						
5 Row 4 Section										
A	B	C	D	E	F	G	H			
		5				4				
1		2		3						
blank	Section W	Section X	Section Y	Section Z	<i>View of tank from driver left side</i>					
				MOTORS CW (A,C,F,H), CCW (B,D,E,G)						
REFER TO DIAGRAM FOR PLACEMENT										

Number represents toolbar location (left to right when viewed from behind toolbar), letter represents hook-up locations on hose manifold.

Montag Gen II Mini

Row Configuration

4 ROW MINI UNIT							
4 Row 1 Section							
A	B	C	D	E	F	G	H
	1			2	3	4	
4 Row 2 Section							
A	B	C	D	E	F	G	H
			4			3	
1				2			
4 Row 3 Section							
A	B	C	D	E	F	G	H
			2			3	
1				4			
4 Row 4 Section							
A	B	C	D	E	F	G	H
			4			3	
1				2			

blank Section W Section X Section Y Section Z

View of tank from driver left side

MOTORS

CW (A,C,F,H), CCW (B,D,E,G)

REFER TO DIAGRAM FOR PLACEMENT

3 ROW MINI UNIT							
3 Row 1 Section							
A	B	C	D	E	F	G	H
	1			2		3	
3 Row 2 Section							
A	B	C	D	E	F	G	H
			3			2	
1							
3 Row 3 Section							
A	B	C	D	E	F	G	H
			3				
1						2	

blank Section W Section X Section Y Section Z

View of tank from driver left side

MOTORS

CW (A,C,F,H), CCW (B,D,E,G)

REFER TO DIAGRAM FOR PLACEMENT

Number represents toolbar location (left to right when viewed from behind toolbar), letter represents hook-up locations on hose manifold.

Montag Gen II Mini

Row Configuration

2 ROW MINI UNIT							
2 Row 1 Section							
A	B	C	D	E	F	G	H
		1			2		
2 Row 2 Section							
A	B	C	D	E	F	G	H
		1			2		
blank		Section W	Section X	Section Y	Section Z		
<i>View of tank from driver left side</i>							
						MOTORS	
		CW (A,C,F,H), CCW (B,D,E,G)				REFER TO DIAGRAM FOR PLACEMENT	

Number represents toolbar location (left to right when viewed from behind toolbar), letter represents hook-up locations on hose manifold.