


18 ROW TO 16 ROW (MIDDLE) REDUCER INSTALLATION GUIDE

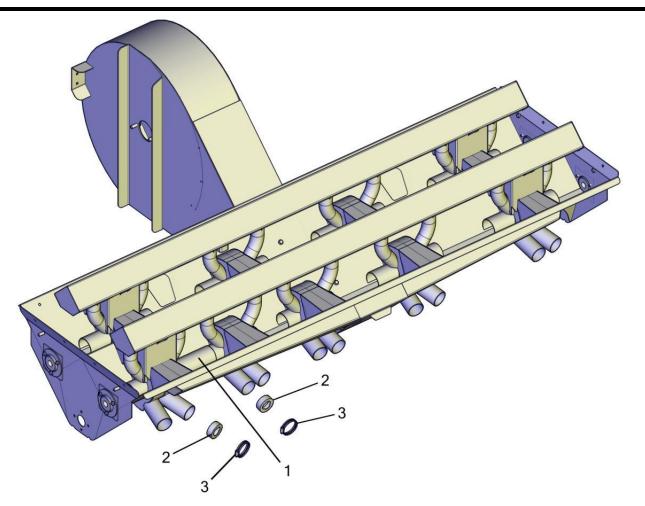

K002230 - Kit - Row Reducer Gen I 18 Row to 16 Row HO Meter (Middle)


Item No.	Qty	Part Number	Description
1	1	M000153	Row Reducer 12 Row - HO Center
2	2	M000179	Cap - 2-1/2" Orange w/Hole
3	2	P000240	Hose Clamp - 2" S/S

K002240 - Kit - Row Reducer Gen I 18 Row to 16 Row STD Meter (Middle)


]	Item No.	Qty	Part Number	Description
or	1	1	M000151	Row Reducer 12 Row - STD Center
l I	2	2	M000178	Cap - 2" Orange w/Hole
	3	2	P000240	Hose Clamp - 2" S/S




18 ROW TO 16 ROW (MIDDLE) REDUCER INSTALLATION GUIDE

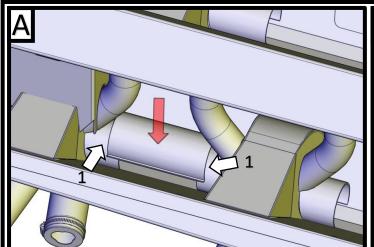

APPLY SILICONE TO TOP OF AUGER COVER (ARROW 1). CENTER AND SNAP THE REDUCER DOWN OVER THE COVER.

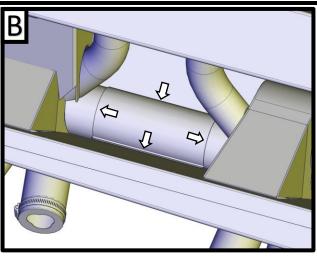

WITH THE REDUCER SECURELY IN PLACE, SEAL EACH EDGE WITH SILICONE. REPEAT FOR EACH REDUCER.

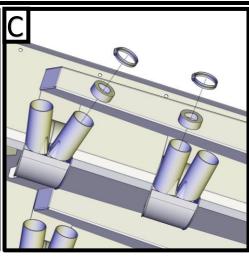

SLIDE CAPS OVER ALL BLOCKED ROW OUTLET TUBES. SECURE EACH ONE WITH A HOSE CLAMP.

