


SEE GT 400 MANUAL FOR FURTHER SETUP INSTRUCTIONS

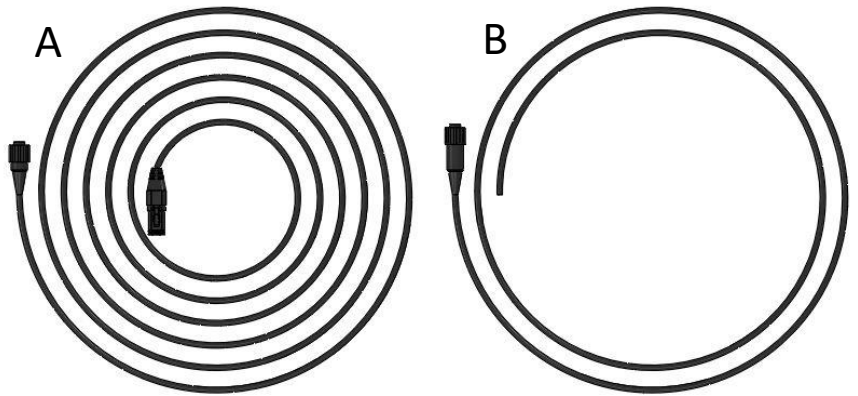

CABLE "B" TO TRACTOR POWER

CABLE "A" FROM LOAD CELL JUNCTION BLOCK

