



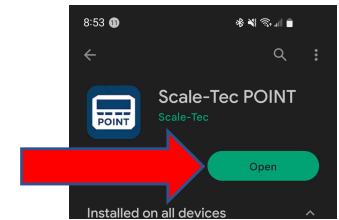


# POINT APP UPDATE INSTRUCTIONS

## DOWNLOAD POINT & CREATE USER


- 1) OPEN THE APP STORE OR PLAY STORE ON YOUR DEVICE
- 2) SEARCH FOR "POINT SCALE" AND SELECT "Scale-Tec POINT" APP
- 3) SELECT "INSTALL". ONCE INSTALLED, SELECT "OPEN"
- 4) FOLLOW THE STEPS BELOW:

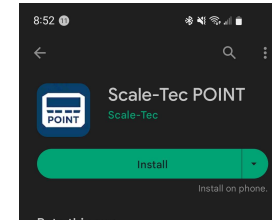


A) SELECT SIGN UP

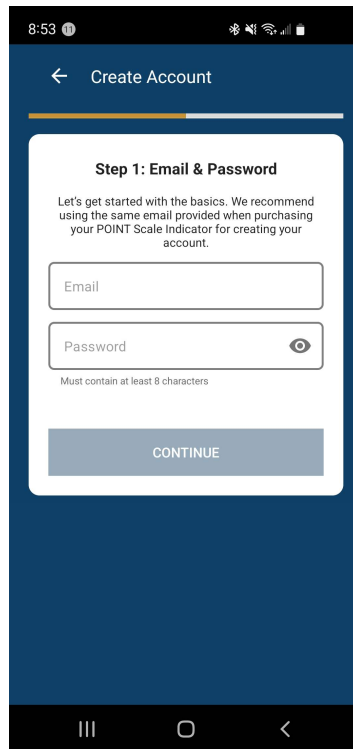

B) ENTER YOU EMAIL  
C) CREATE PASSWORD

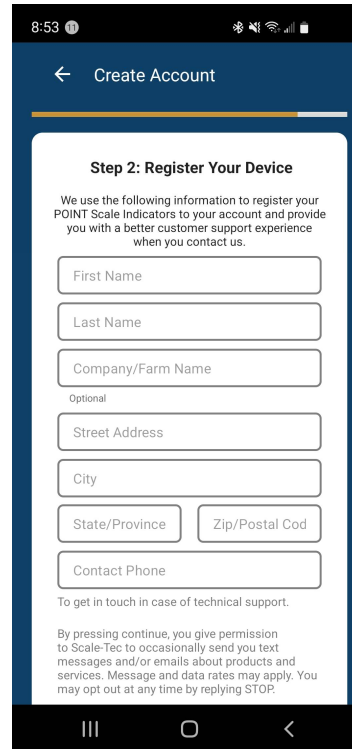


D) FILL IN YOUR INFO  
E) SELECT CONTINUE

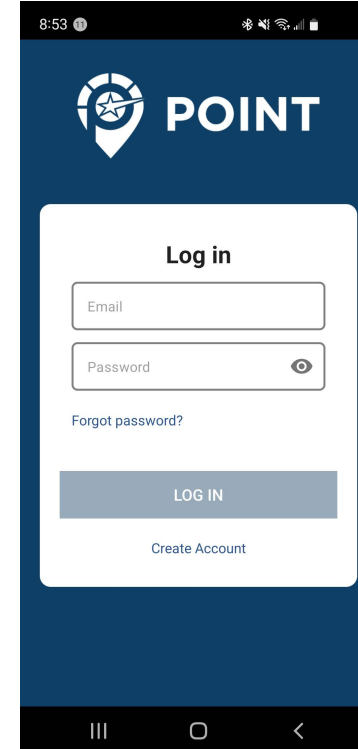


F) ENTER EMAIL & PASSWORD  
G) SELECT "LOG IN"

## UPDATE POINT TO LATEST VERSION


- 1) POWER ON POINT DEVICE ON MACHINE
- 2) FOLLOW THE STEPS BELOW:

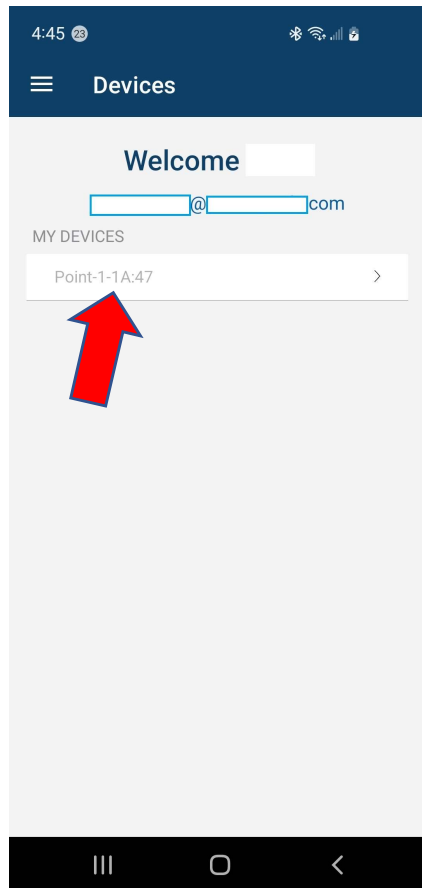


A) SELECT POINT DEVICE

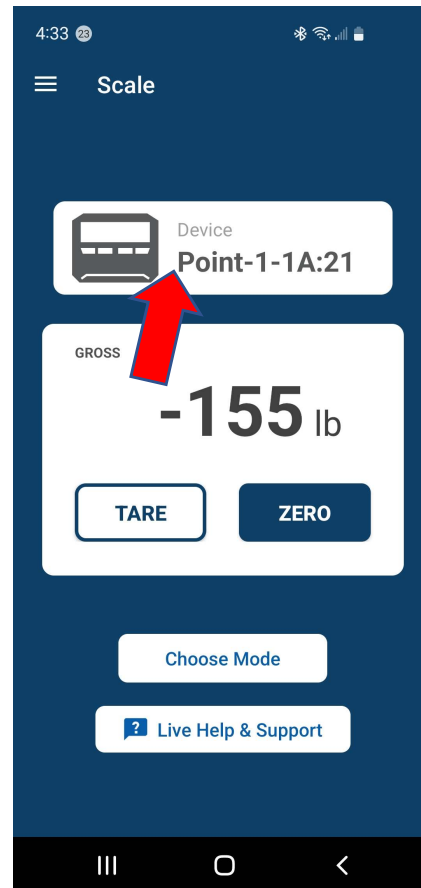

B) SELECT POINT DEVICE




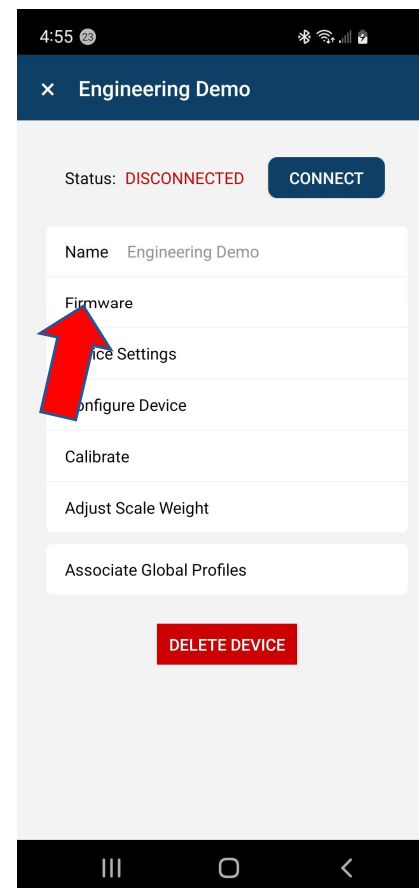


C) SELECT FIRMWARE

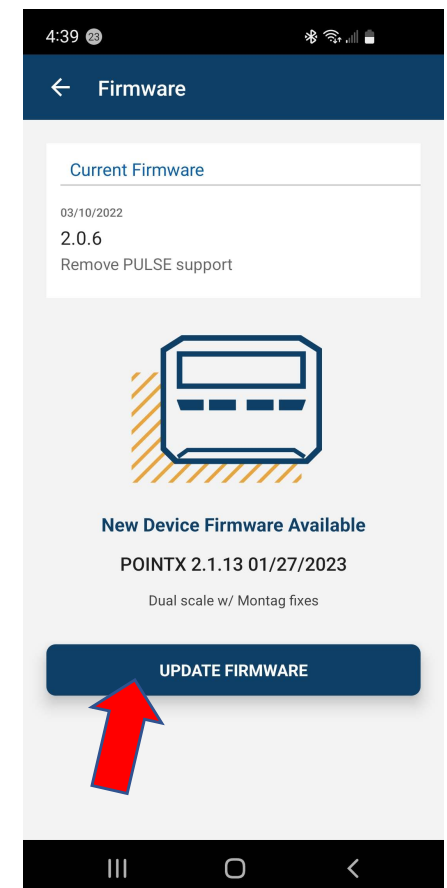

D) SELECT UPDATE FIRMWARE

## UPDATE POINT TO LATEST VERSION - CONTINUED

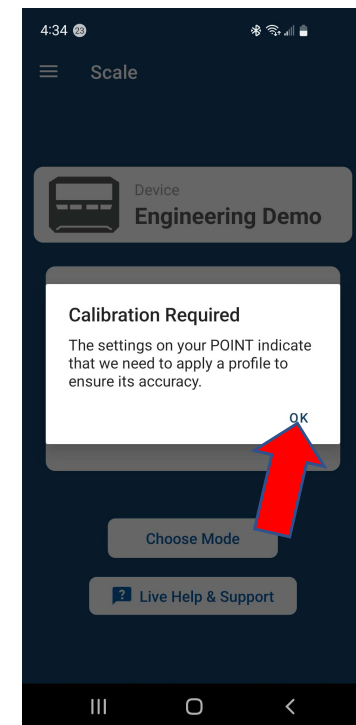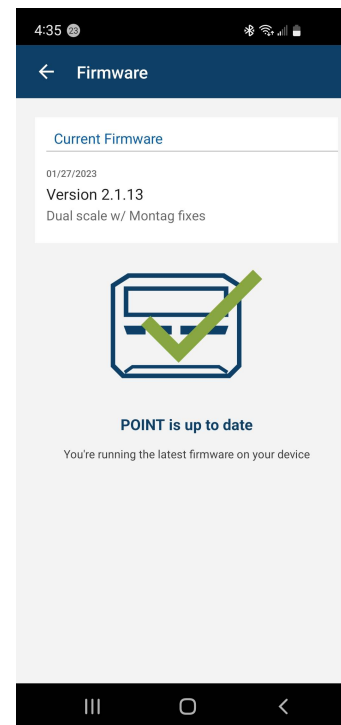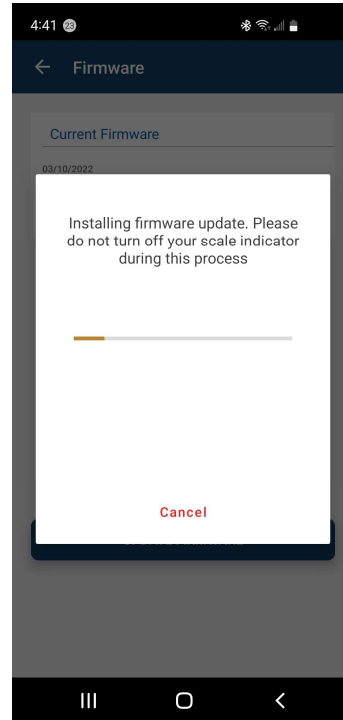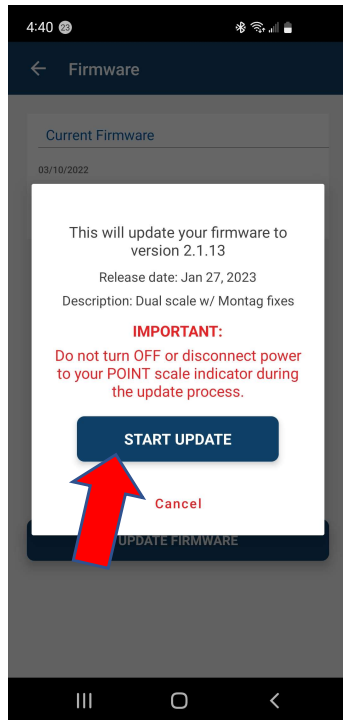

**E) SELECT START UPDATE**

**F) UPDATE MAY TAKE 5 MIN**

**G) CLOSE APP AND SHUT DOWN POINT DISPLAY**

**H) START POINT DISPLAY AND LAUNCH APP**


**I) AUTO-CALIBRATION MAY BE REQUIRED ON RESTART**

**J) PRESS OK, SETTINGS WILL BE DOWNLOADED**

**K) UPDATE COMPLETE, YOU CAN NOW USE THE POINT SYSTEM**

THE POINT SYSTEM SHOULD POWER UP AND DOWN WITH THE ISOBUS SYSTEM.

**“POINT” ISO VIRTUAL TERMINAL DISPLAY**

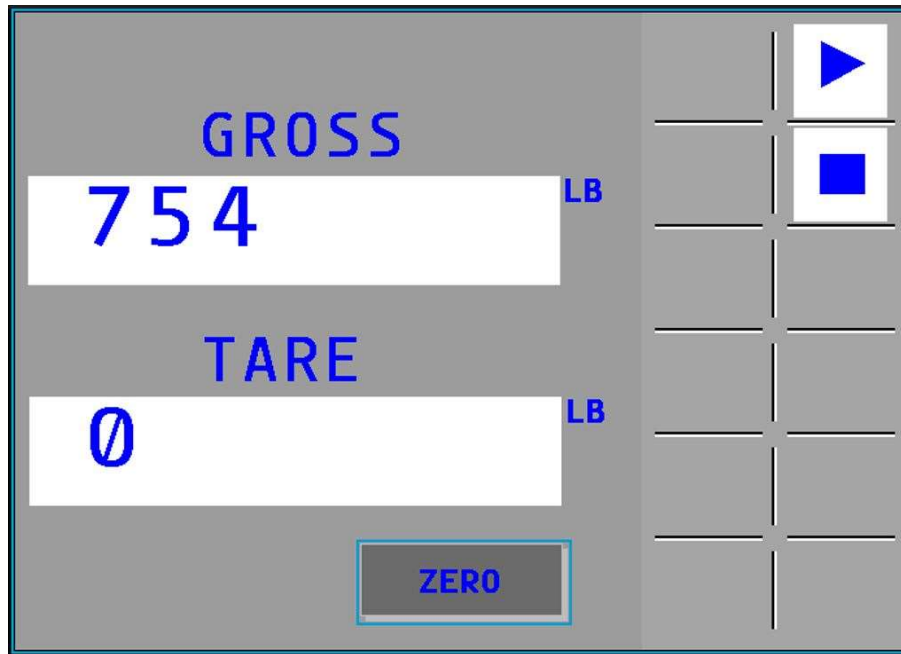

IF USING A MONTAG DRY RATE CONTROLLER, SCALE WEIGHTS SHOULD ALSO SHOW UP ON THE MDRC VIRTUAL TERMINAL IN THE TANK ICONS