


HOSE ROUTING FOR GEN I SYSTEM


Diagrams below show the Row connection numbers for the auger air chamber outlet tubes on the 8, 12, 16 and 24 row configurations dry fertilizer systems are shown below. Connect air hoses from outlet tube number shown for your row configuration to the corresponding toolbar row.

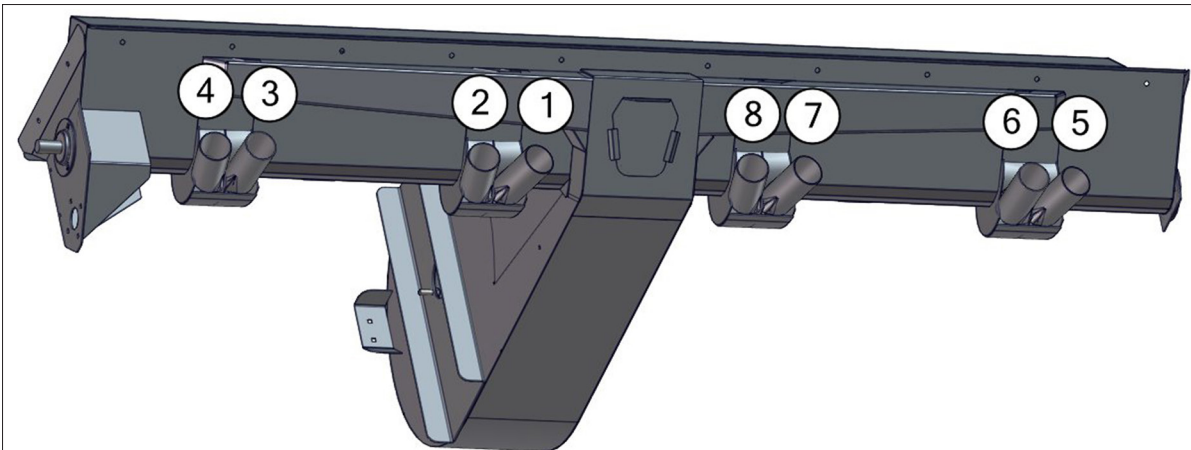


8-Row Single Bin Hose Connections

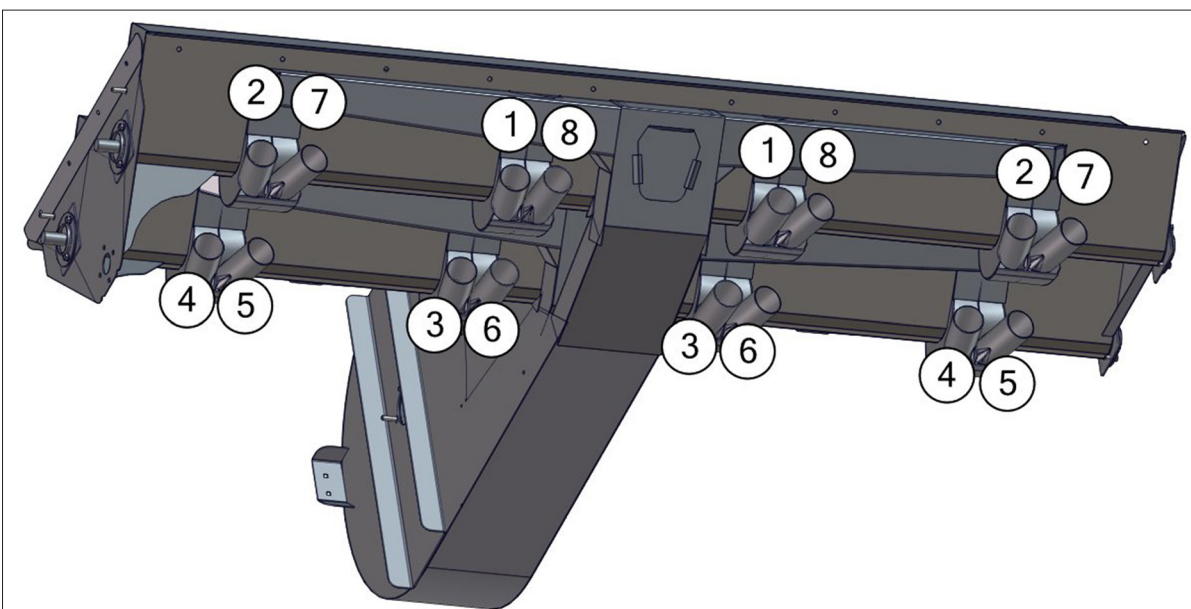


8-Row Dual Placement Hose Connections

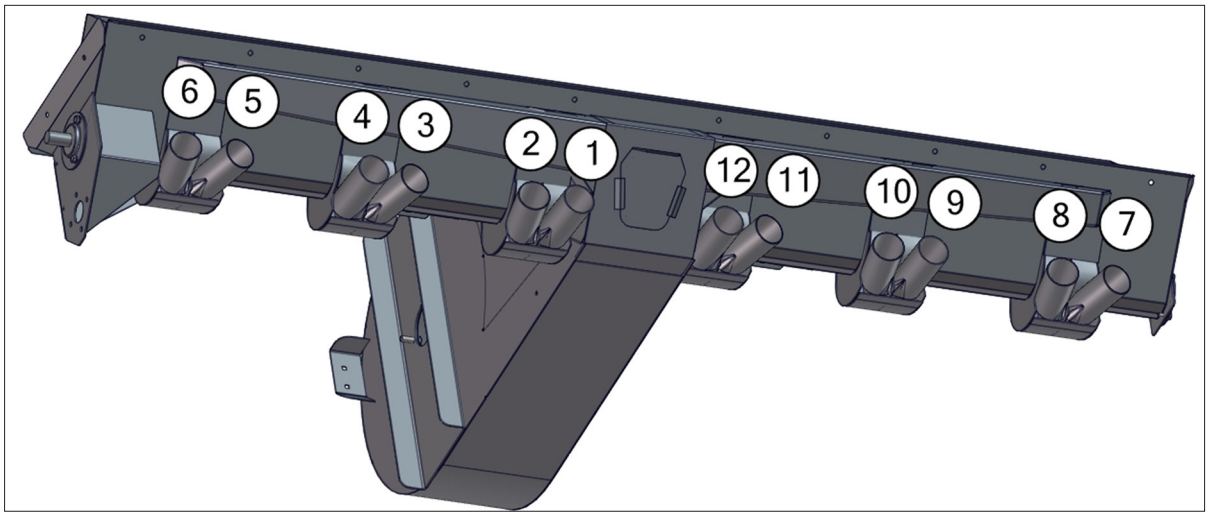


12-Row Single Bin Hose Connections

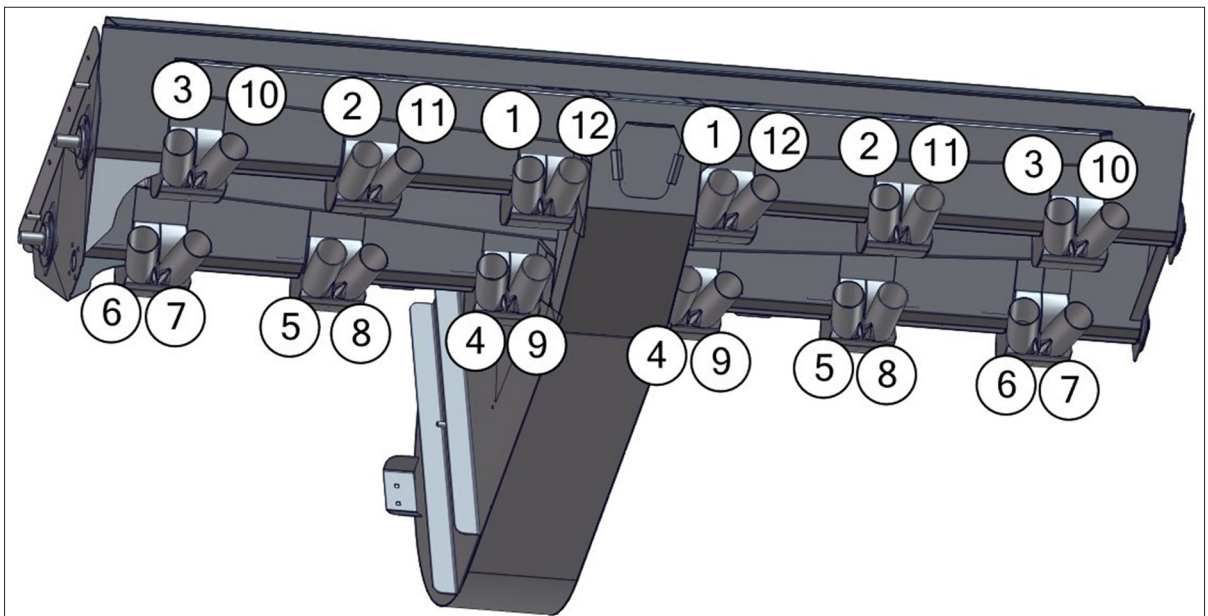


12-Row Dual Placement Hose Connections

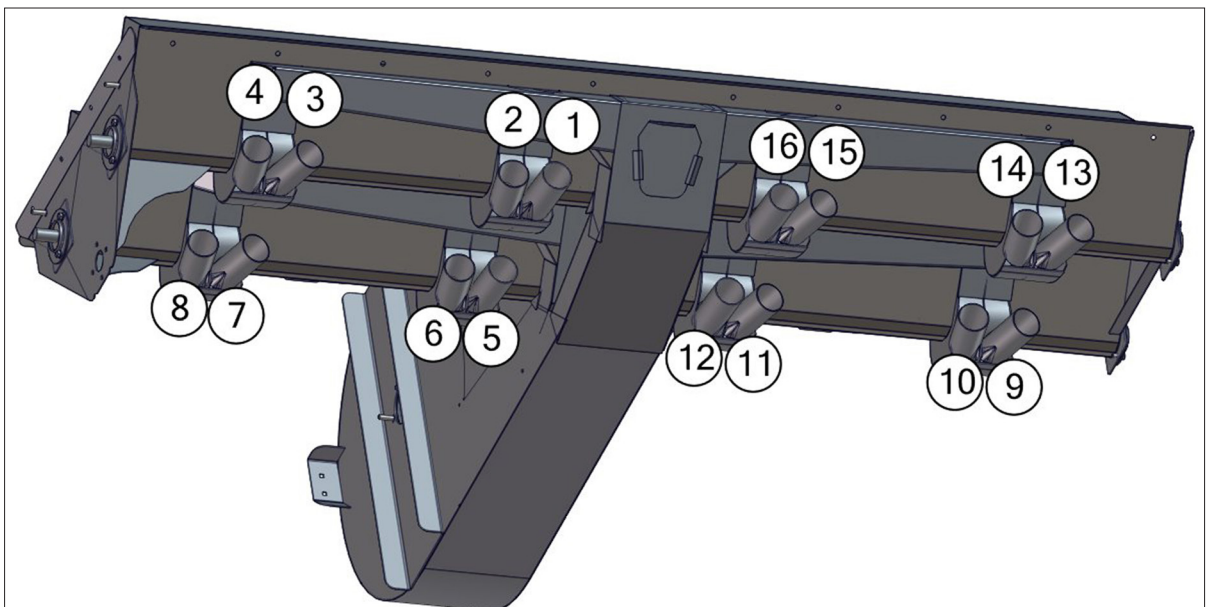

16-Row Hose Connections

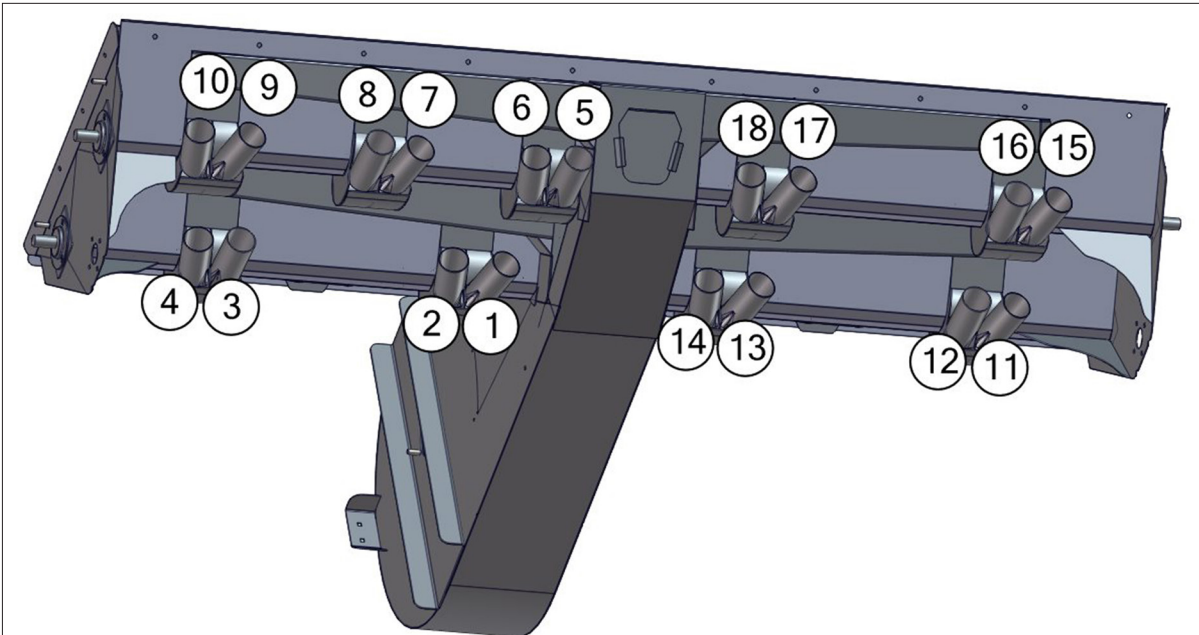

18-Row Hose Connections

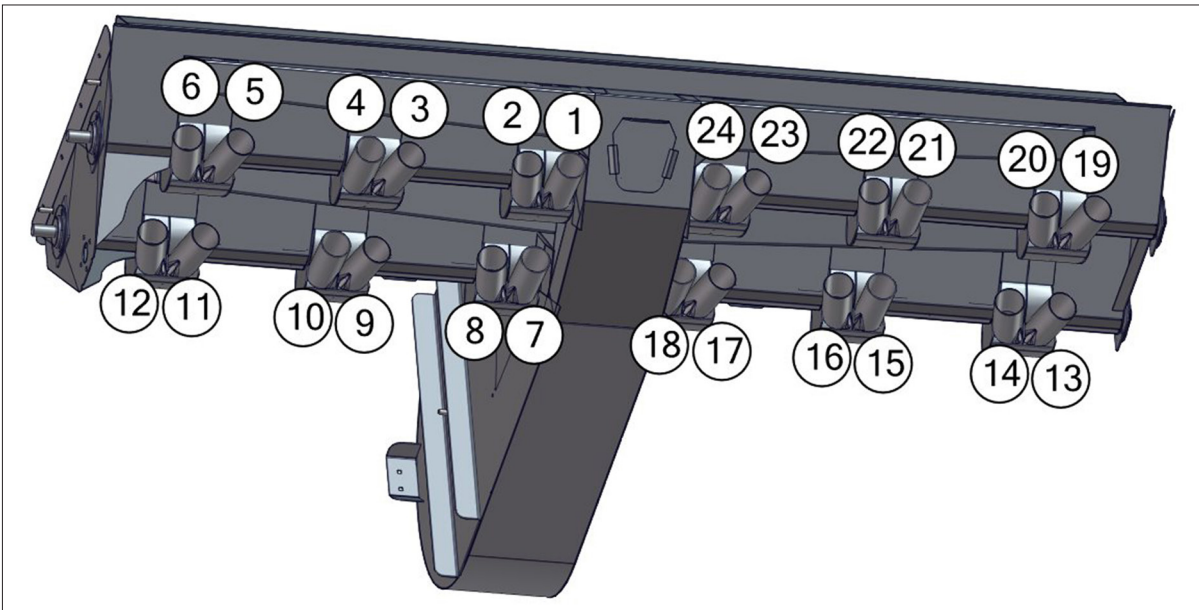

24-Row Hose Connections