


INSTALL ALL FOUR LOAD CELLS  
ARROW DOWN AS SHOWN

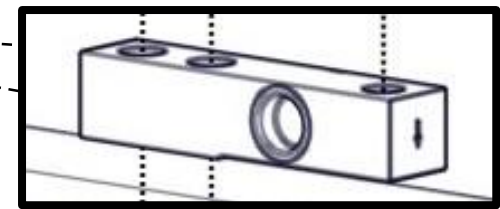

TORQUE LOAD CELL BOLTS TO:  
A = 354 FT-LBS.  
B = 317 FT-LBS.

SAFETY BOLT - TIGHTEN NUT UNTIL .375" (10 MM) GAP BETWEEN WASHER AND FRAME, BOLT SHOULD BE LOOSE (MOVE FREELY) AFTER BEING INSTALLED.